


Model FBL 35N-P16

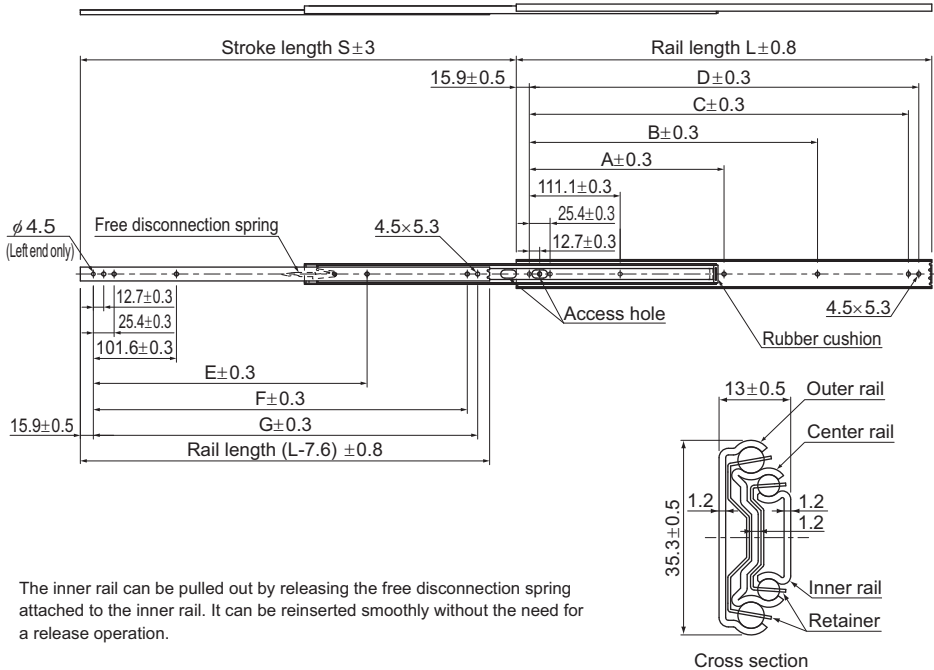

The inner rail can be pulled out by releasing the free disconnection spring attached to the inner rail. It can be reinserted smoothly without the need for a release operation.

Unit: mm

Rail length L (± 0.8)	Stroke S (± 3)	Mounting hole dimensions							Mounting hole		Permissible load N/pair	Mass kg/pair
		A	B	C	D	E	F	G	Inner rail	Outer rail		
254	280	—	—	209.5	222.2	—	203.2	215.9	6	6	290	0.61
305	330	—	149.2	260.3	273	233.1	254	266.7	7	7	290	0.74
356	381	—	200	311.1	323.8	258.5	304.8	317.5	7	7	280	0.86
406	432	—	250.8	361.9	374.6	283.9	355.6	368.3	7	7	270	0.98
457	483	212.7	301.6	412.7	425.4	309.3	406.4	419.1	7	8	250	1.1
508	533	238.1	352.4	463.5	476.2	334.7	457.2	469.9	7	8	240	1.22

Model number coding

FBL35N-P16 +508L

Model number

Overall rail length (mm)